
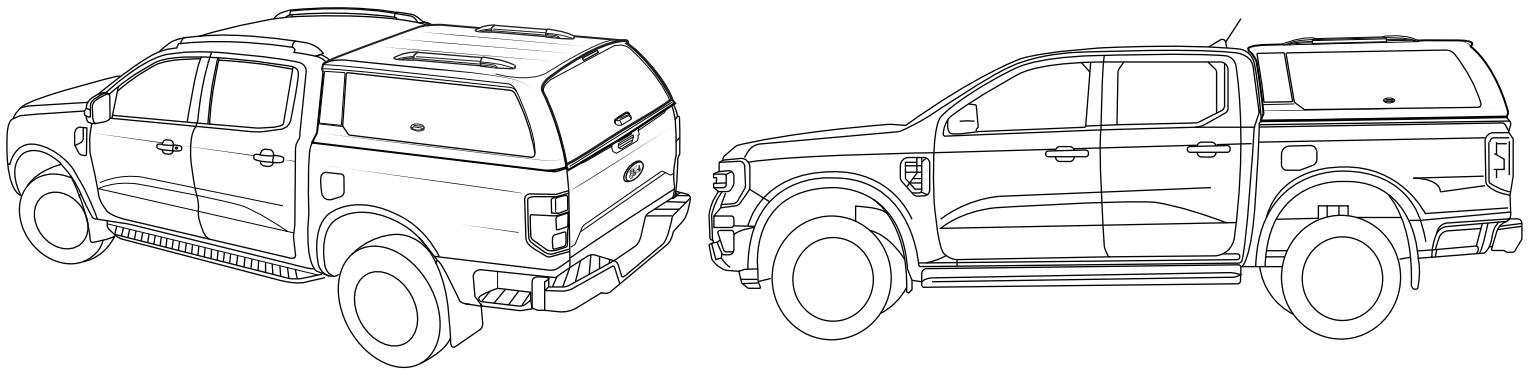











INSTALLATION PARTS

 Hardtop 1 set.	1  Spare parts carton box 1 pc. C-130043	2  Weather strip 1 roll. C-020132	3  Sponge Rubber edge 1 roll. C-020494-04T	4  Clear color one-side protective tape 1 roll. C-160694-01
5  Fiberglass base for attaching the LOGO 1 pair. C-100388-01S	6  Wiring harness 1 set. C-090271-15(Front) , C-090271-12(Front)	7  Cable tie 5.5 15 pcs. C-130046	8  Latch mounting bracket S6 1 pair. C-110467-01	9  Screw JP 8-1/2 SUS 304 EDP 2 pcs. C-030059
10  Plastic cap nut 12 pcs. C-100136	11  Latch mounting bracket S6 1 pair. C-110467-02	12  Nylon lock nut M8 4 pcs. C-030492	13  Aluminum adjustable shim for latch S8 2 pcs. C-040581	14  Shock absorber stabilus gas 2 pcs. C-160204
15  Double bolt M8 6 pcs. C-120108S	16  Washer M8 16 pc. C-030599	17  Spring Washer M8 12 pc. C-030044	18  Nut M8 12 pc. C-030597	19  Installation manual 1 set. C-132716-01
20  Check list 1 pc. CL-280056-02				


INSTALLATION TOOLS

 Screwdriver electric	 Screw driver	 Torque Wrench No.10	 Wrench No.13	 Measuring tape
--	---	--	---	---


1 Process to prepare vehicle truck edge and hardtop.

STEP 1


A Remove 8 plastics pooks follow diagram using screw driver.

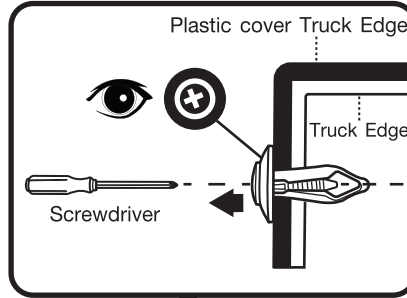


B Press & remove 26 plastic clips underneath L/R truck edge.

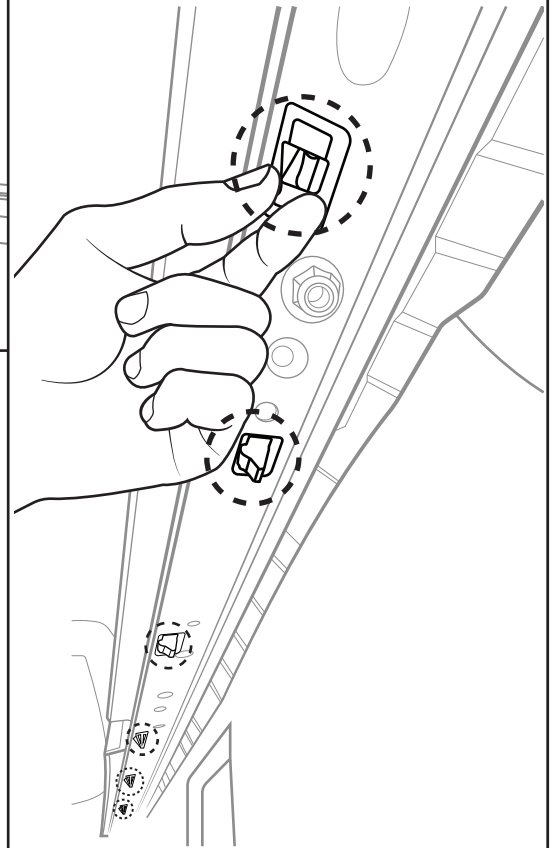


C Remove original L/R plastic bar cover truck edge.

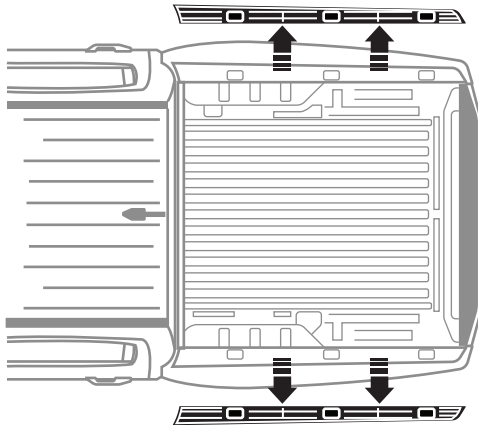


STEP 2 Clean underneath hardtop base (Front/L/R). Stick seal sponge underneath Front/L/R base of hardtop using double side glue tape.

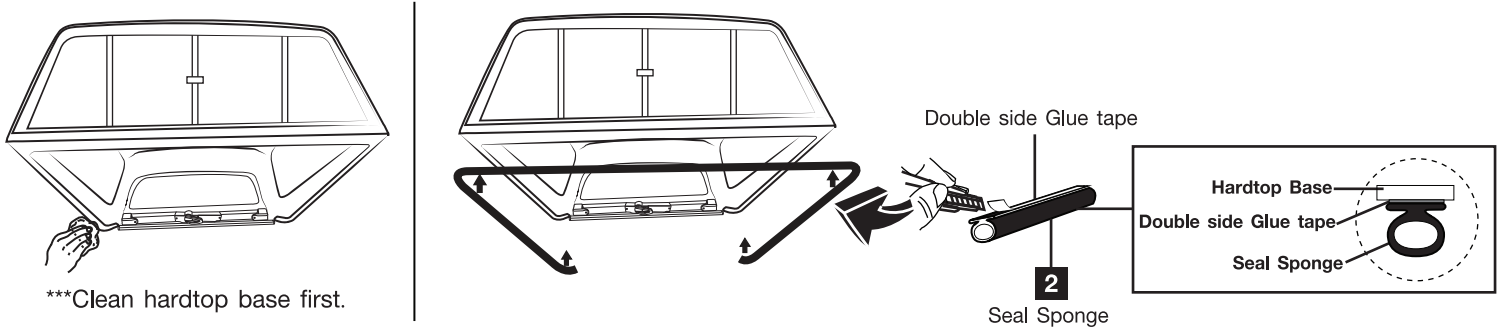



STEP 3 Clean the truck edge.

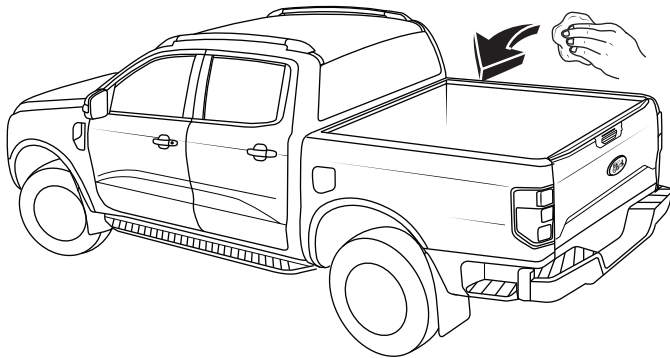


STEP 4 Place hardtop on the truck edge and adjust alignment between front and rear, left and right.

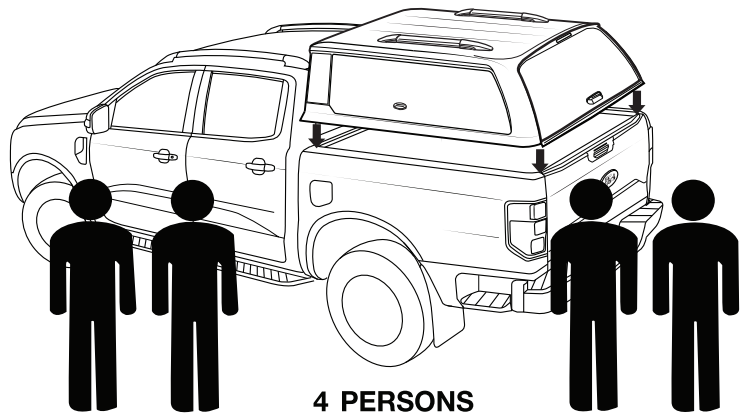


Place hardtop on the truck edge and adjust alignment between front and rear, left and right.

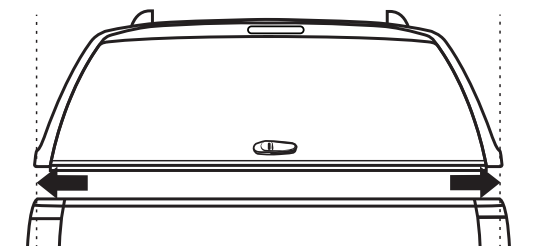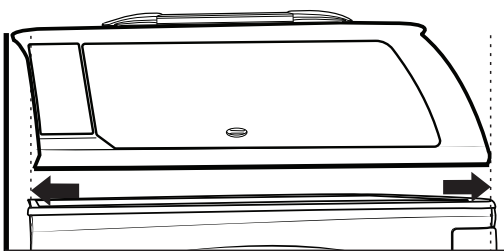


- 2** Process to lock the hardtop on the truck edge using double bolts. Insert double bolts from underneath the L/R base of hardtop (3 pieces per side) through the vehicle stud-hole and metal stopper follow diagram. Then, tighten with provided nut and plastic cap cover the nut.

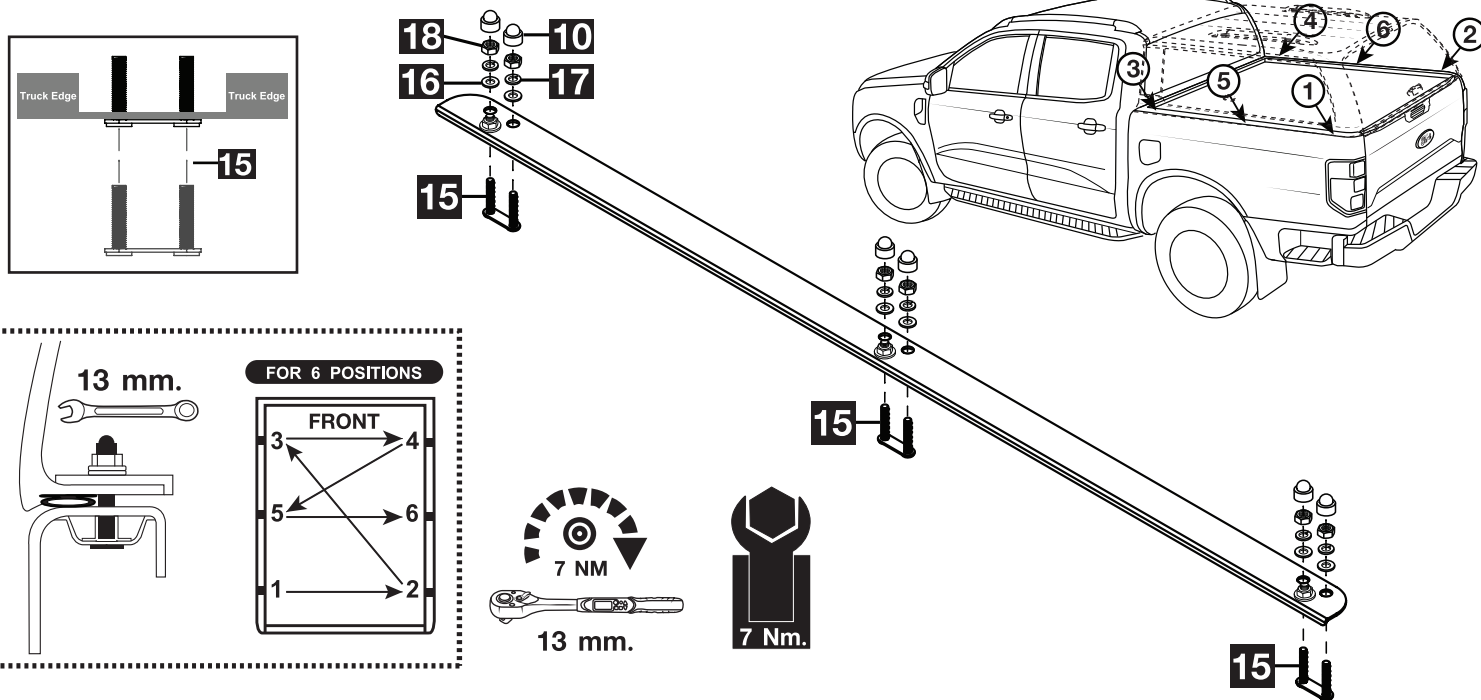




- 3** Installing slam lock on the rear door.

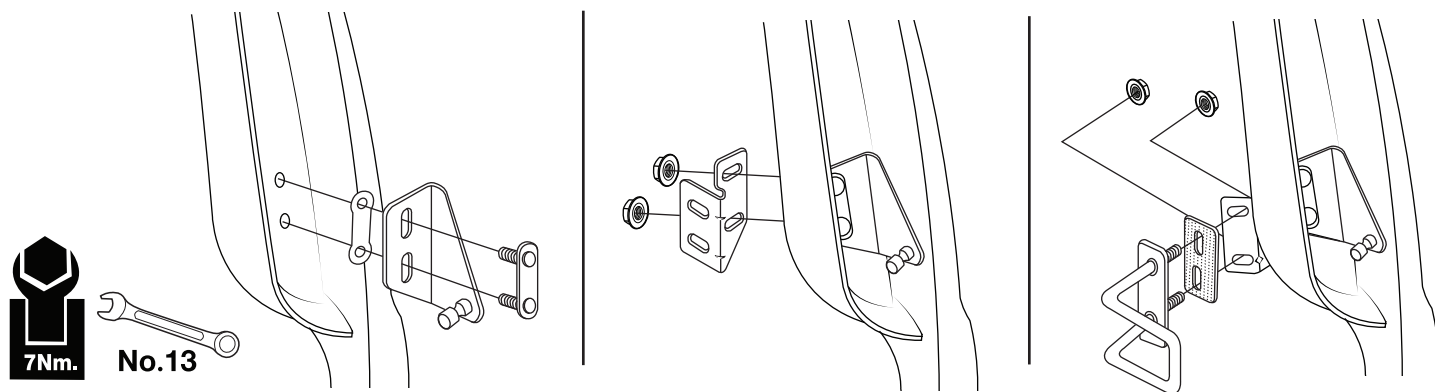



- 4** Adjust latch L/R for matching with the rotary lock on the rear door.

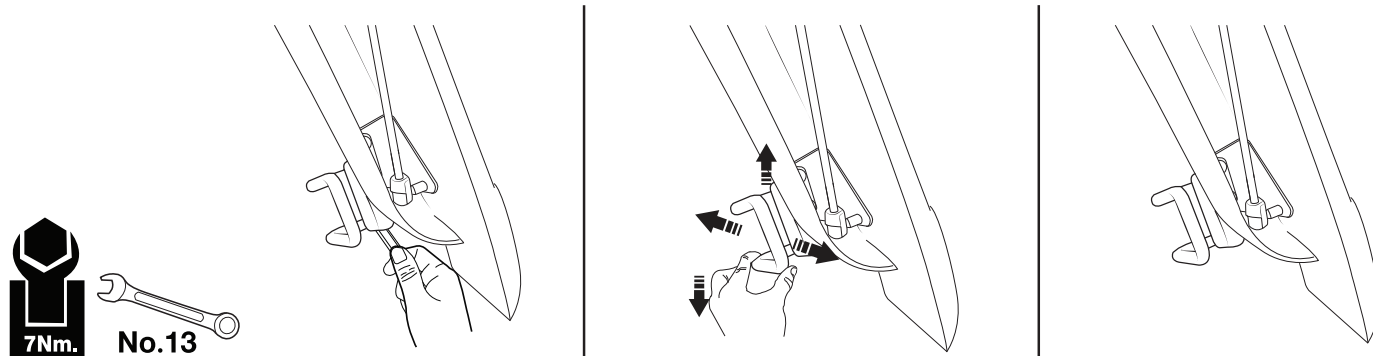


5 Shock absorber assembly.

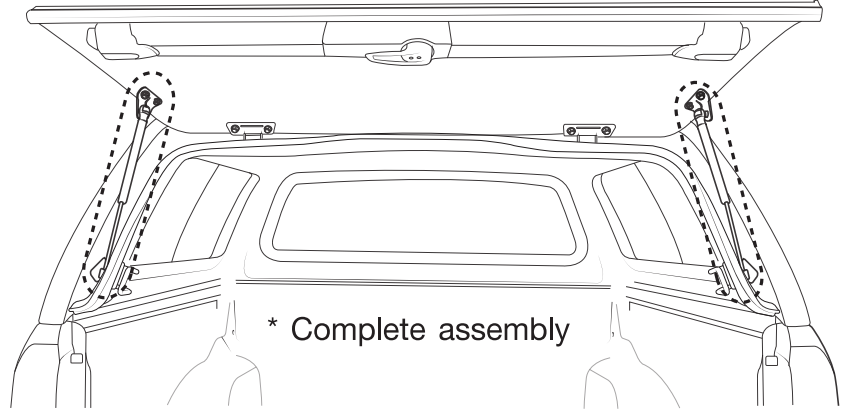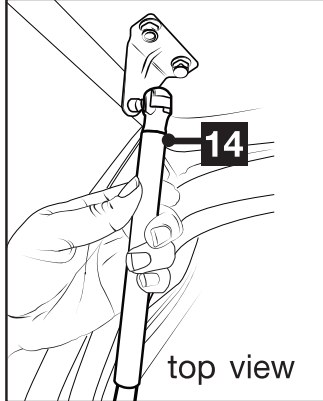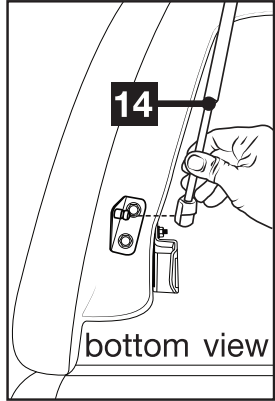

6 Put weather strip on rain channel L/R follow the diagram.

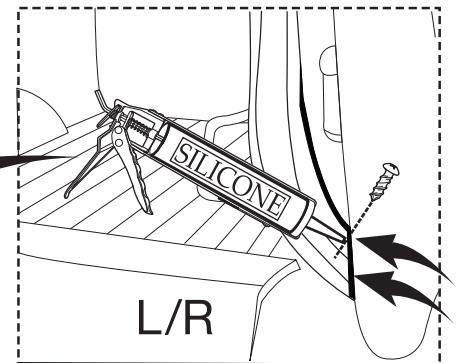
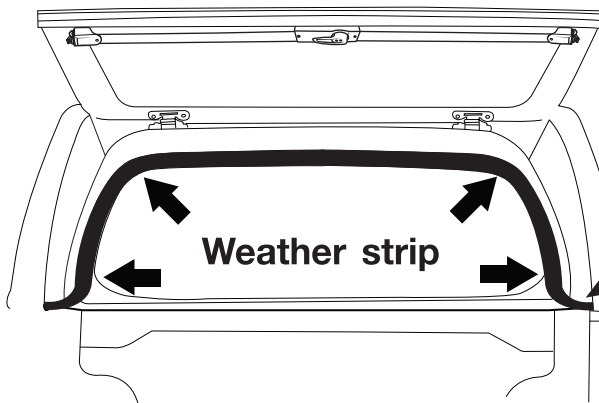


7 Stick LOGO CARRYBOY L/R.

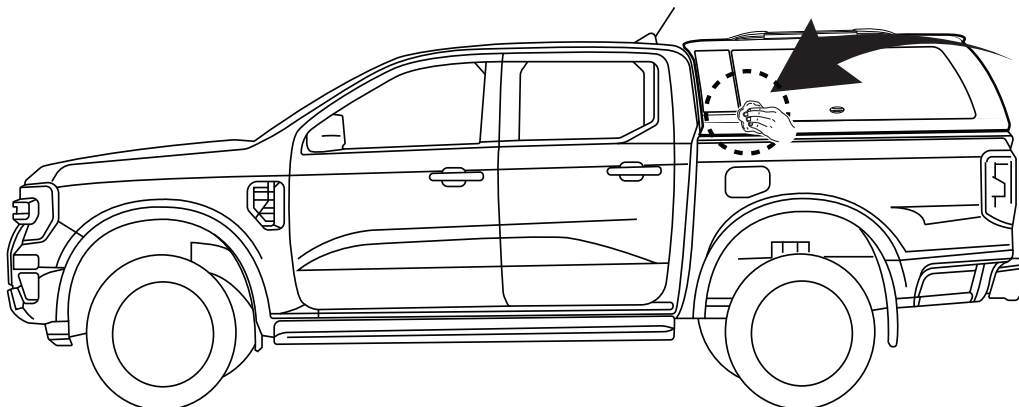



C-132716-01
18/6/67
REV : 02

Detail B

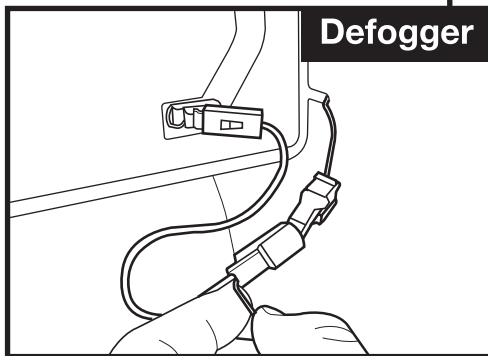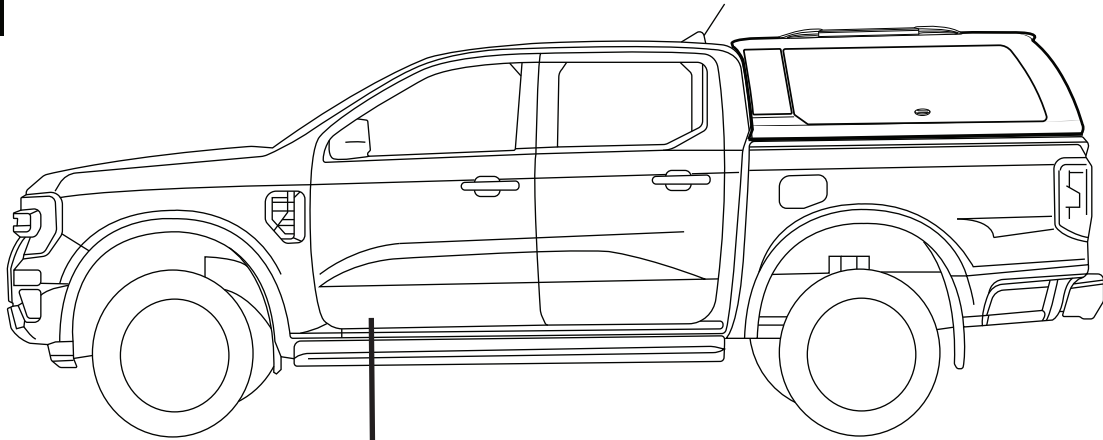
Defogger




	Vehicle wiring Harness	External wiring Harness
Brake Light	Yellow - Grey	Blue
Room Lamp	Battery +12V	White

Detail C

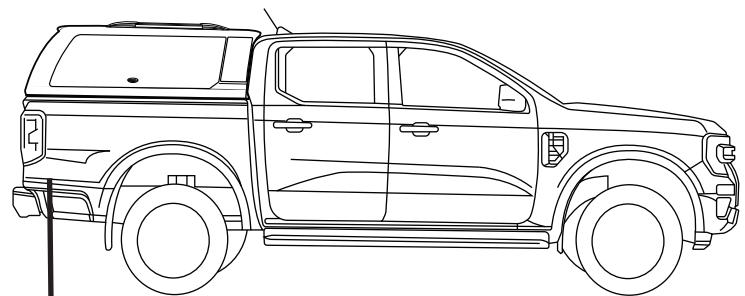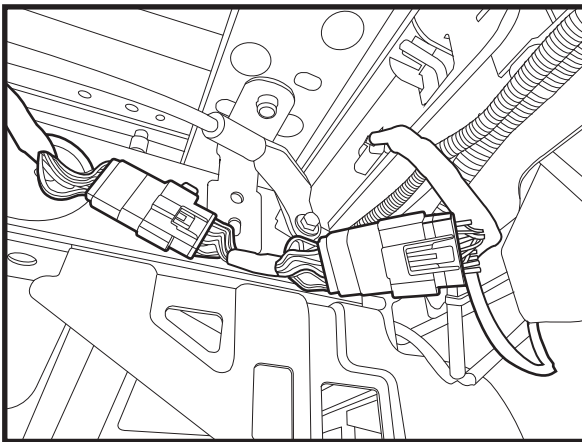

	Vehicle wiring Harness	External wiring Harness
Brake Light	Yellow - Grey	Blue

Detail D

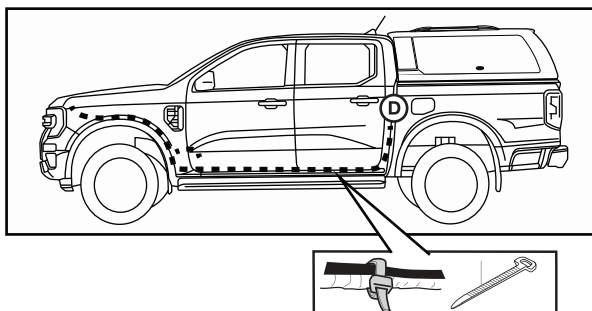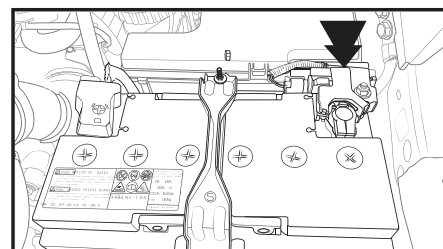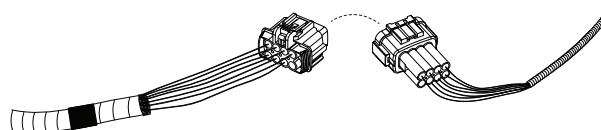

External wiring Harness
Hardtop wiring Harness

Important


Secure the canopy harness to the existing vehicle harness using the supplied cable ties at even intervals ensuring that all harnesses are away from moving parts.


Wiring Harness Diagram (Front Exit Type)

C-090271-12


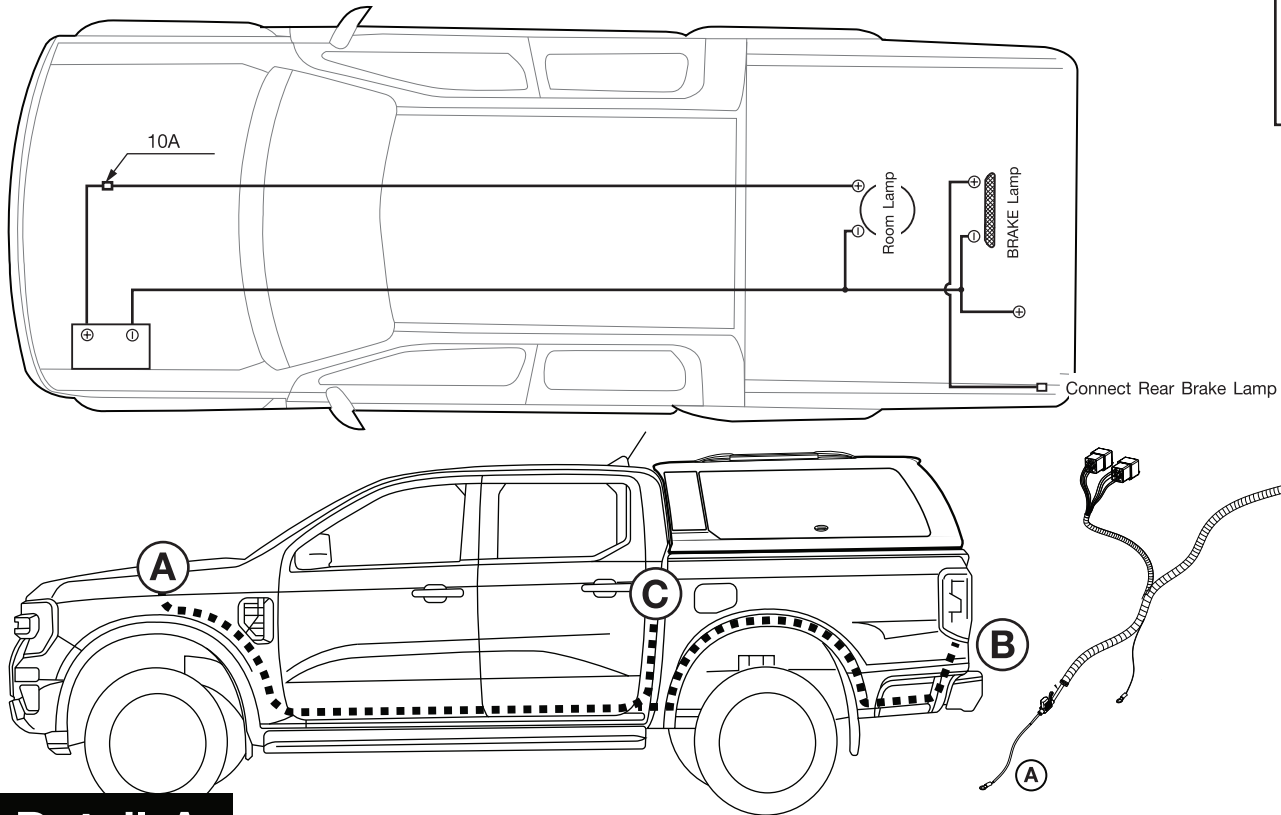
- Brake
- Room Lamp
- Remote




Detail A

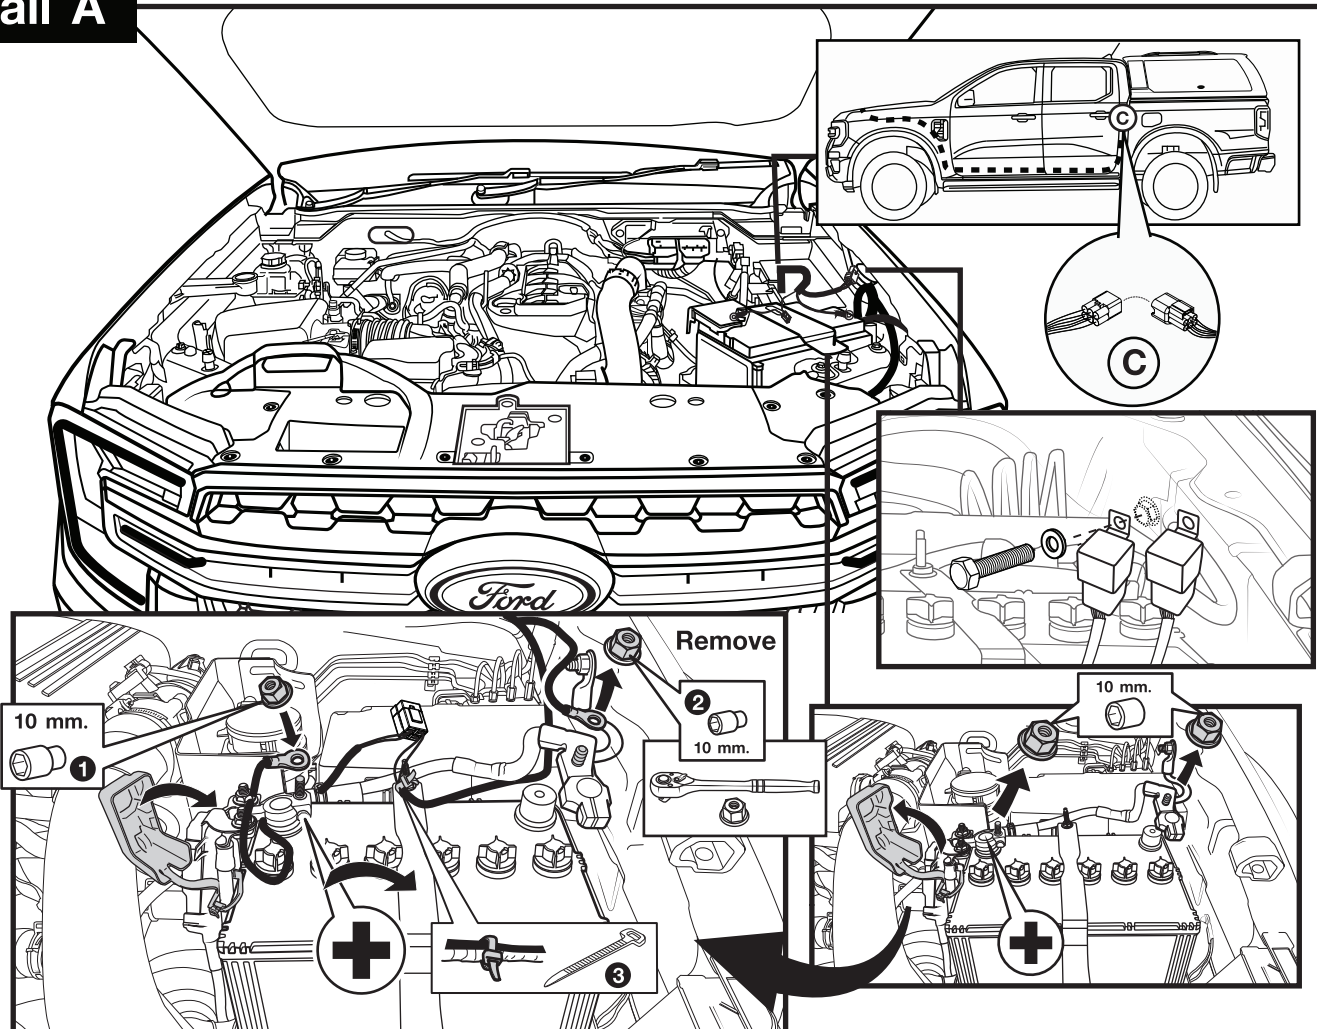

Detail B

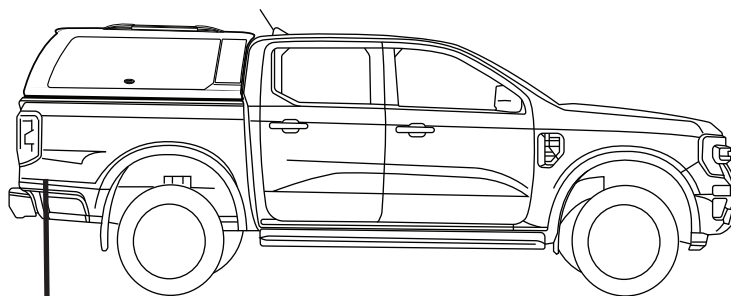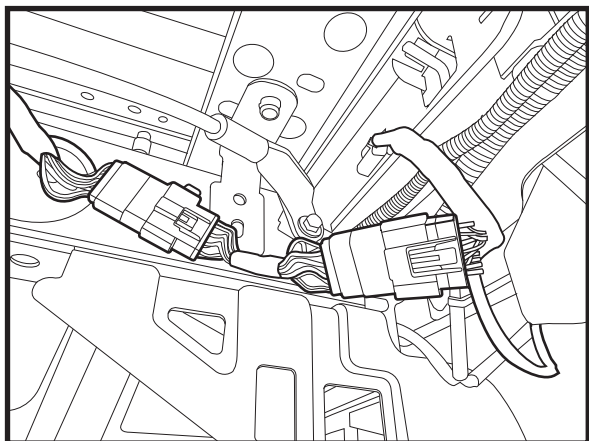


Detail C

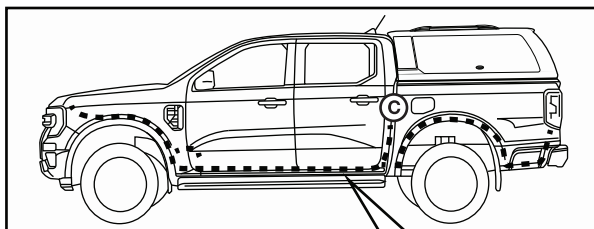

External wiring Harness

Hardtop wiring Harness

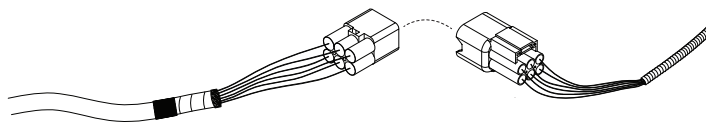

Important



Secure the canopy harness to the existing vehicle harness using the supplied cable ties at even intervals ensuring that all harnesses are away from moving parts.

